



## INSTALLATION GUIDE

### Requirements:-


- 1) **Drill machine** : for Making hole into wall.
- 2) **Marker/pencil**: - for marking purpose
- 3) **For Installation**: - Wall plug, Screw & allen key (Included in Box)

**NOTE: THIS INSTALLATION MANUAL CAN ALSO BE REFERRED FOR AVC-503745 & AVC-503739**

**Range: VIC**



**\* Representative image**

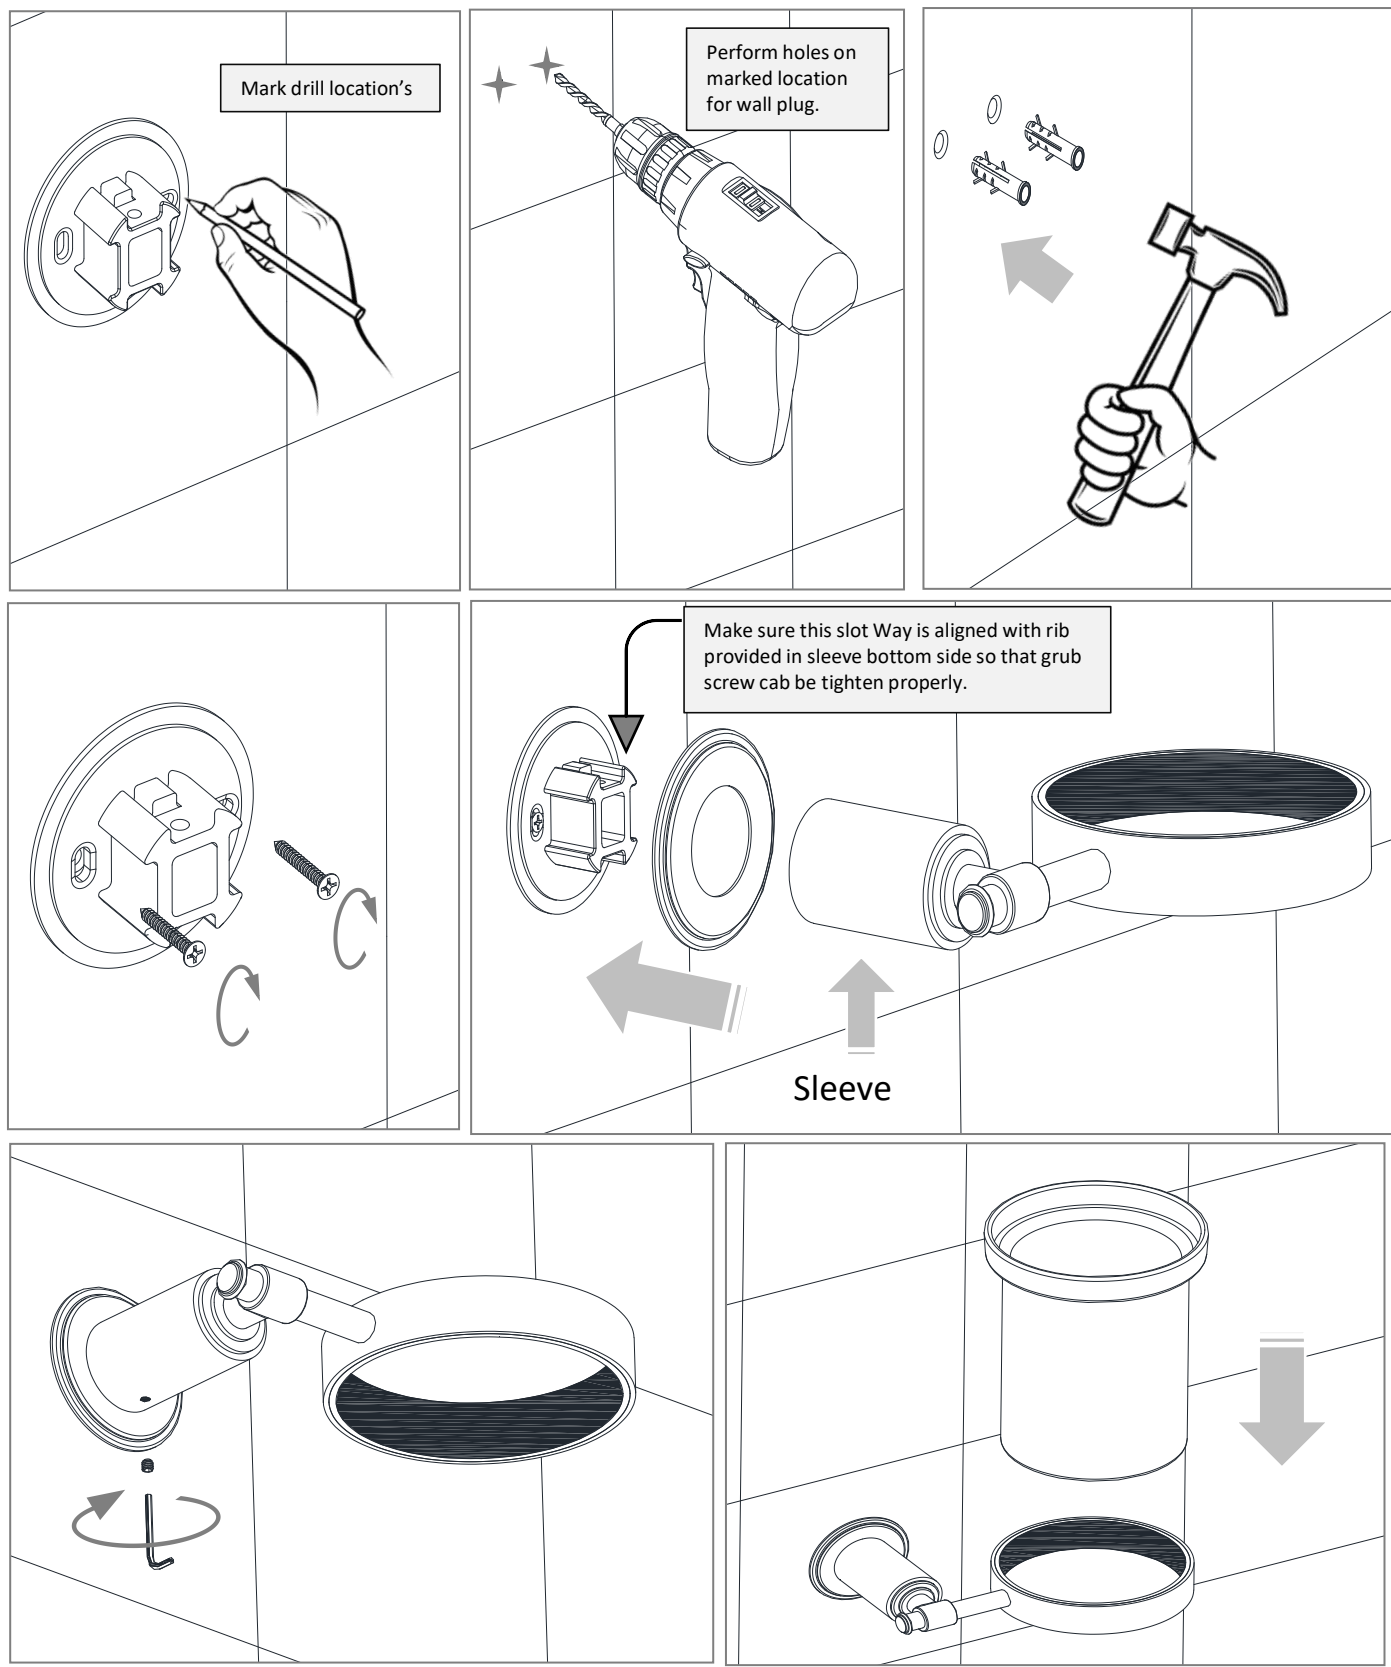



## Safety & Cleaning Tips :-

- ❖ Tighten any loose screws or hardware.
- ❖ Use proper eyewear while perform drilling work.
- ❖ The Tumber holder should be placed in a position where the user can reach easily.
- ❖ Use Soft cotton cloth & wipe with normal water, avoid using any hard bristle brush or any chemical powder soap.



## Correct Cleaning Steps:

### 1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap solution with a neutral pH (around 7).  
Spray it gently on the Outer surface of Product.

### 2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.  
This prevents scratches and keeps the surface shiny.

### 3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.  
This helps remove any soap residue.

### 4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.  
This ensures no water spots are left.

### ✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non  
Chrome  
Surface

For  
Chrome  
Surface



Recommended Cleaning:-  
Twice in a Week.

**NOTE: THIS INSTALLATION MANUAL CAN ALSO BE REFERRED FOR  
AVC-503745 & AVC-503739  
Range: VIC**