











INSTALLATION GUIDE

Double Robe Hook Range:VIC



Requirements:-

- 1) **Drill machine** : for Making hole into wall.
- 2) **Marker/pencil**: - for marking purpose
- 3) **For Installation**: - Wall plug, Screw & allen key (Included in Box)

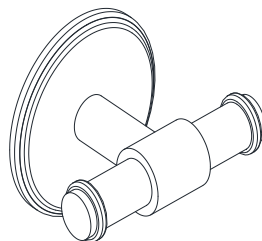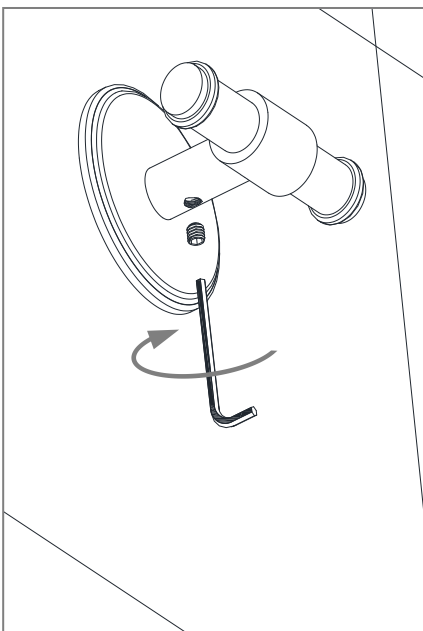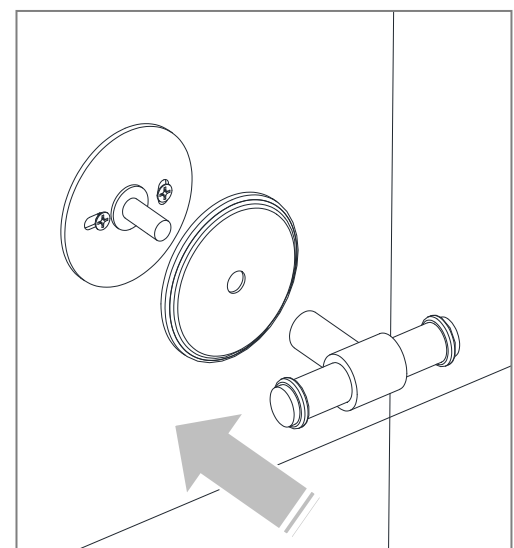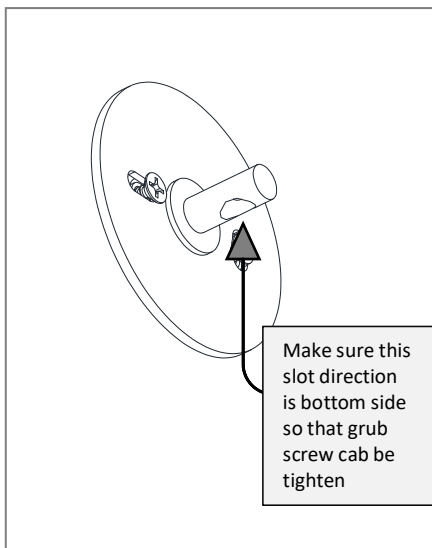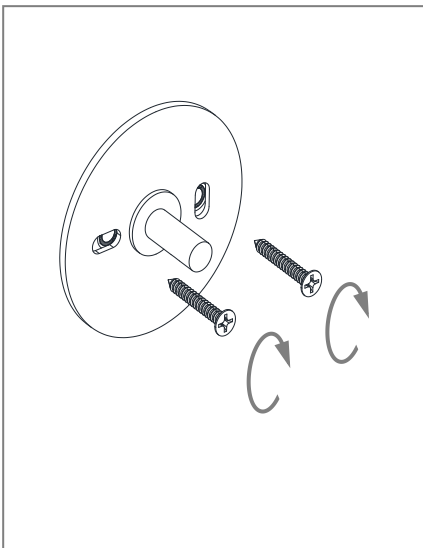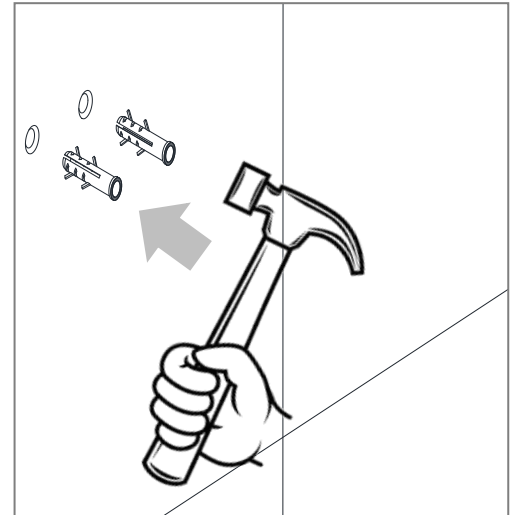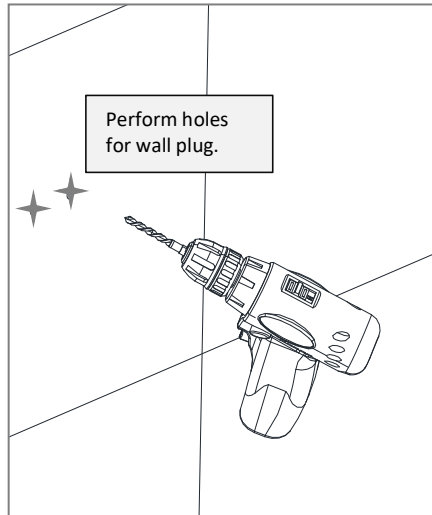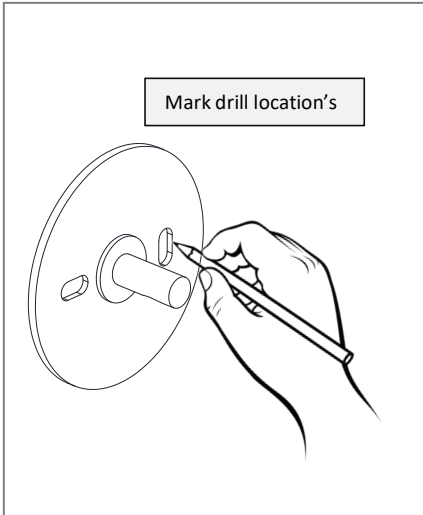

Safety Tips:-

- ❖ Tighten any loose screws or hardware.
- ❖ Use proper eyewear while perform drilling work.
- ❖ Place the Item at Reachable Height.
- ❖ Use soft Hammer to avoid damage.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**