



INSTALLATION GUIDE







Requirements:-

- 1) **Drill machine** : for Making hole into wall.
- 2) **Marker/pencil**: - for marking purpose
- 3) **For Installation**: - Wall plug, Screw & Allen key (Included in Box)

NOTE: THIS INSTALLATION MANUAL CAN ALSO BE REFERRED FOR BOTH ITEMS AVC-503711 & AVC-503781
Range: VIC




*** Representative image**

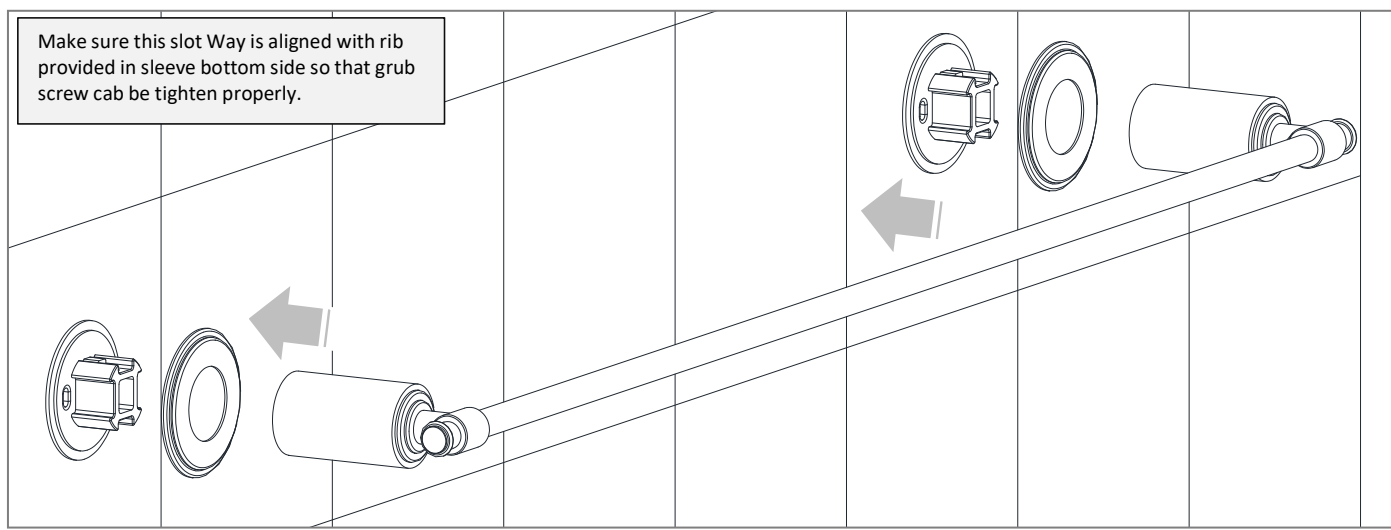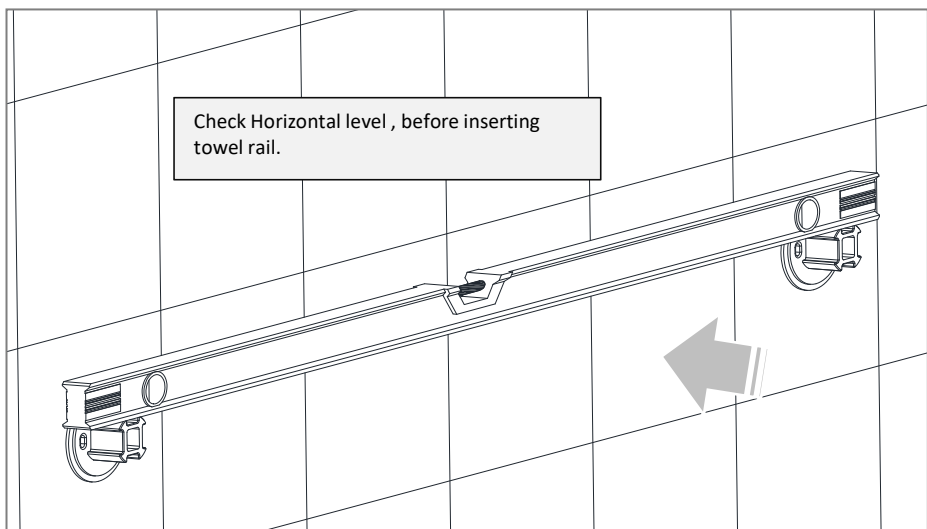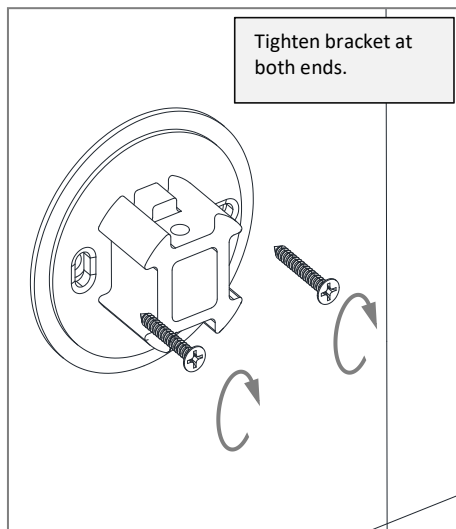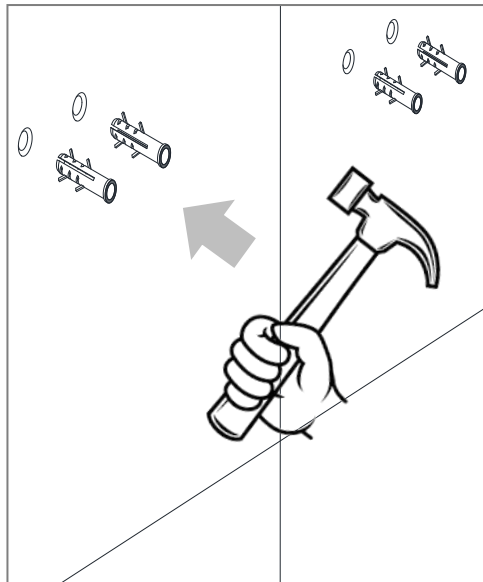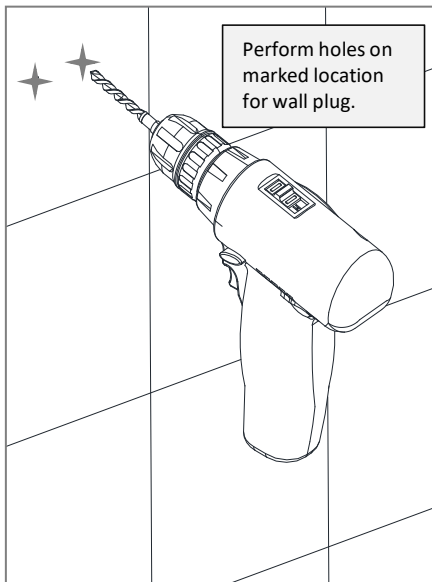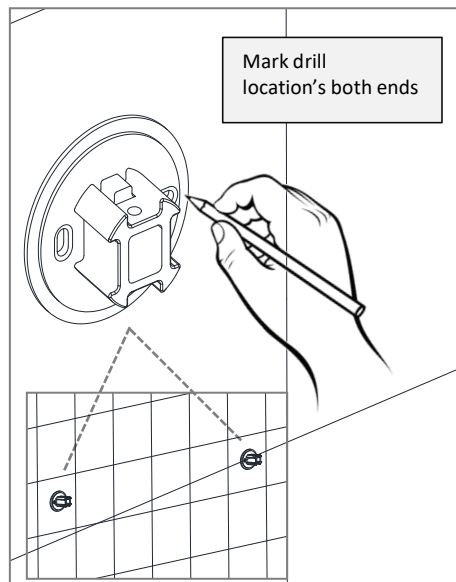

Safety & Cleaning Tips :-



- ❖ Tighten any loose screws or hardware.
- ❖ Use proper eyewear while perform drilling work.
- ❖ The Tumber holder should be placed in a position where the user can reach easily.
- ❖ Use Soft cotton cloth & wipe with normal water, avoid using any hard bristle brush or any chemical powder soap.

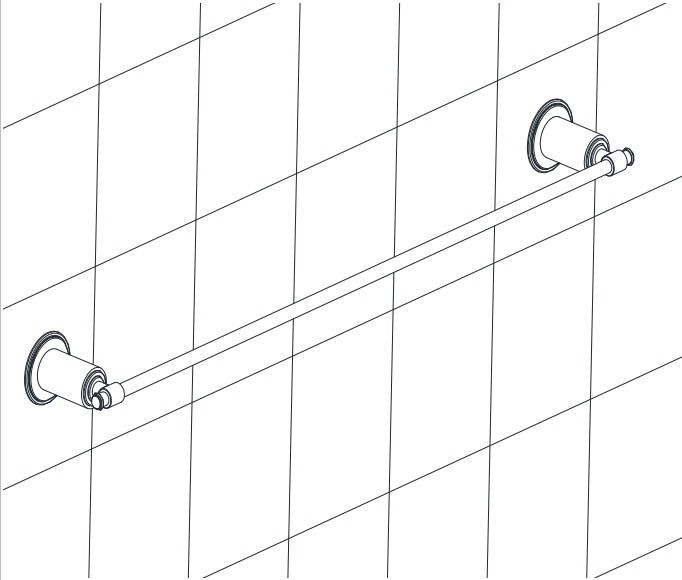

Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap solution with a neutral pH (around 7).
Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.
This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.
This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.
This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface

For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**

**NOTE: THIS INSTALLATION MANUAL CAN ALSO BE REFERRED FOR
BOTH ITEMS AVC-BLP-503711 & AVC-BLP-503781**

Range: VIC