




INSTALLATION GUIDE

2 way bib cock with wall flange Range:VIC

Requirements:-

- 1) **Pressure** :- 3 bar to 4 bar (Ideal Working Pressure)
Pipe Lines:- 1 lines for hot or cold inlet (1/2" BSPP)
Installation:- Wall Mounted.

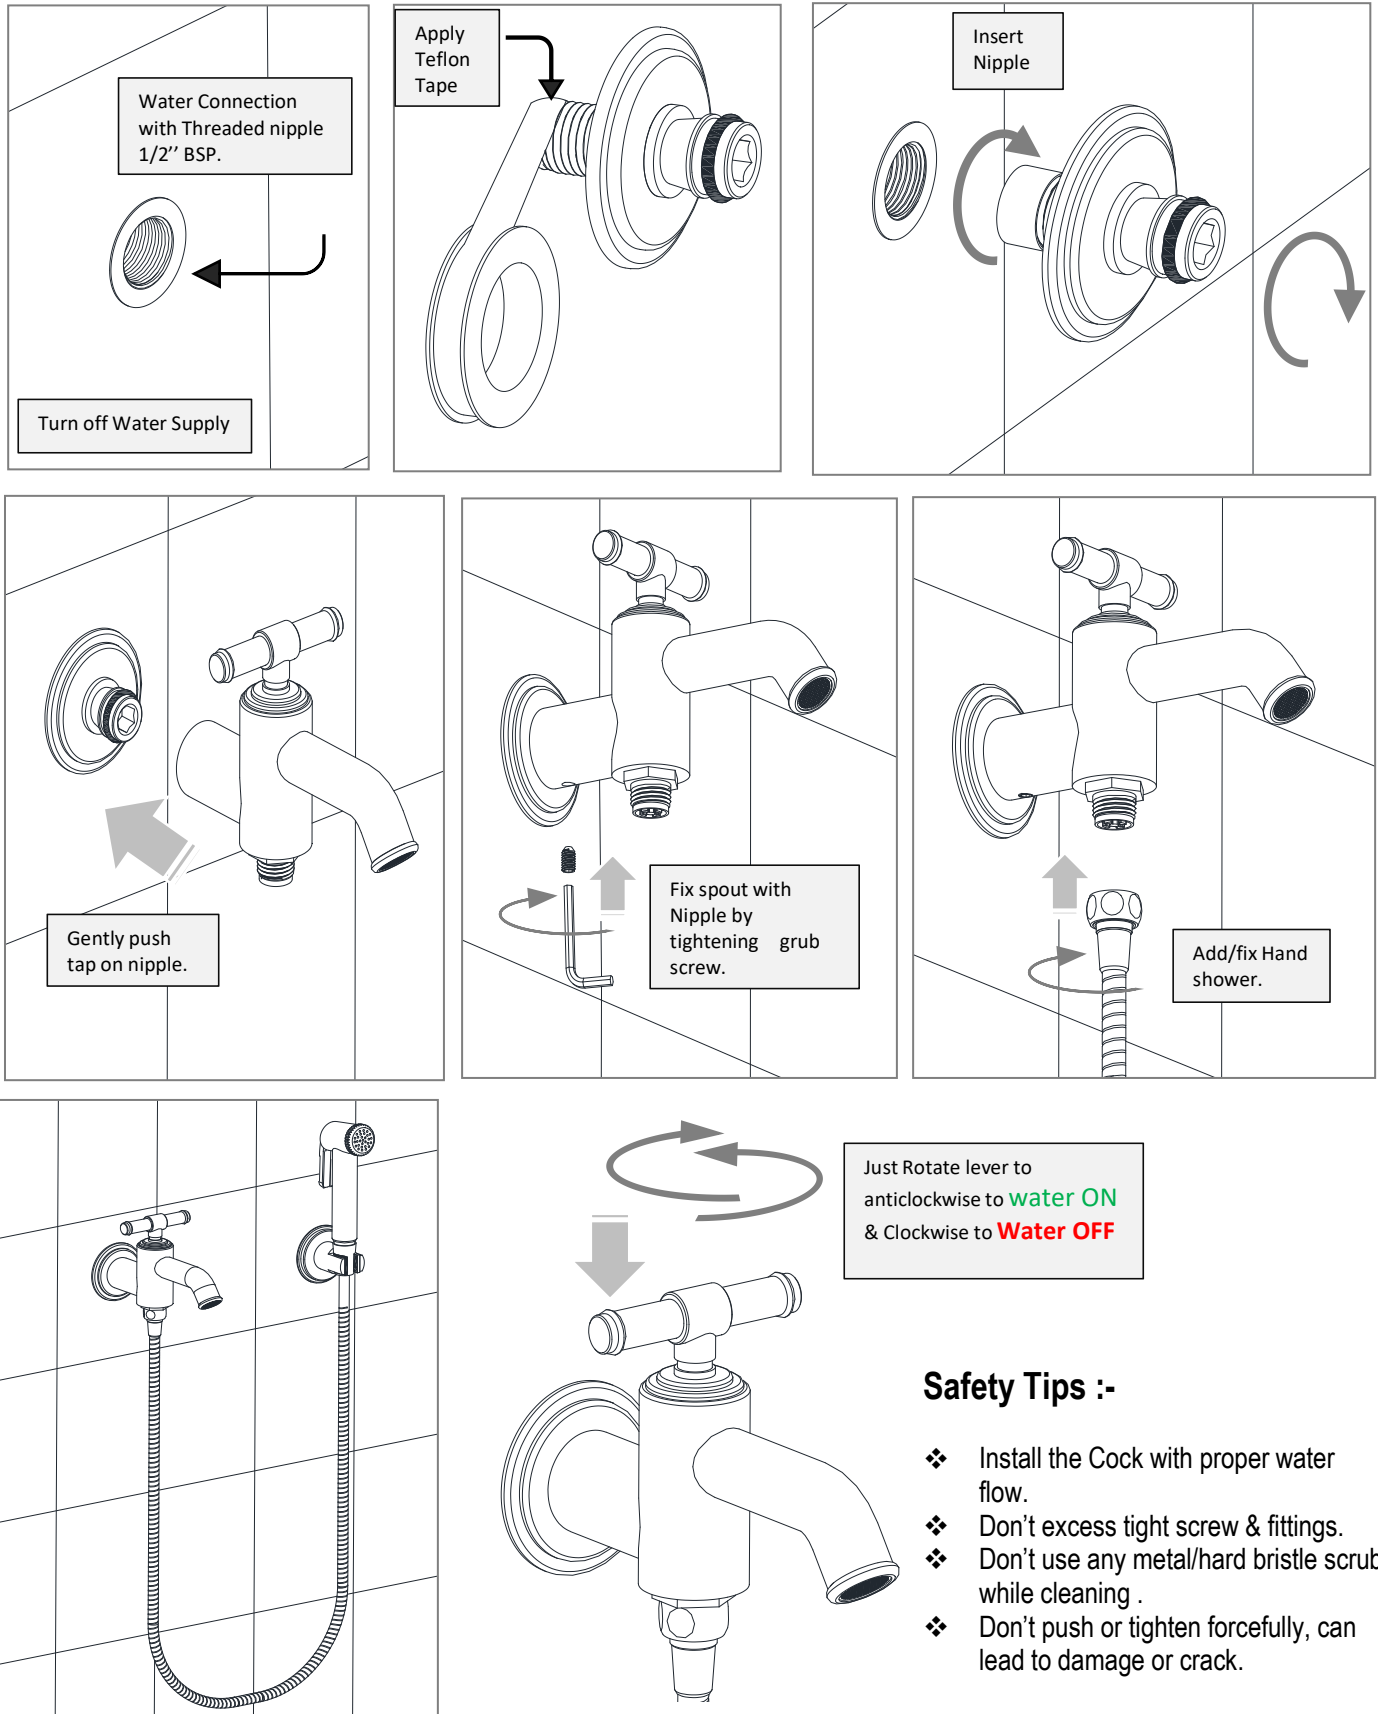



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.



**Recommended Cleaning:-
Twice in a Week.**

Troubleshooting

(A) Flow related

Problem	: -	Reduced Water Flow.
Cause	: -	Blocked/Clogged cartridges/aerators.
Remedy	: -	Remove the aerators, cartridges clean it thoroughly.

(B) Leakage

Problem	: -	Water Leakage
Cause	: -	Damaged/Broken/Worn out O-rings, brass nuts not tightened
Remedy	: -	Remove & Replace the defective O-rings. Or Tighten the brass nuts firmly

(C) Operation

Problem	: -	Lever Hard To Operate
Cause	: -	Clogged Cartridges (Silt, Dirt, Calcium Deposits etc.)
Remedy	: -	Remove the cartridges clean it thoroughly with water/vinegar.