





INSTALLATION GUIDE

Requirements:-


Shower Mixer with Provision for Connection to
Exposed Shower Pipe (VIC-5031211 &
VIC-503555) & Hand Shower, Wall Mounted
Range:VIC

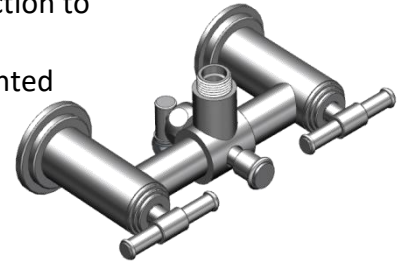


Check the threaded depth, later on we need to adjust nipple length according to hole depth.

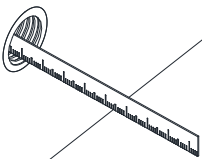

Note: make sure water is off.

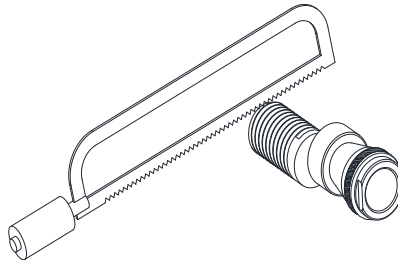





Keep the Nipple length according to threaded hole, cut excess length if required.

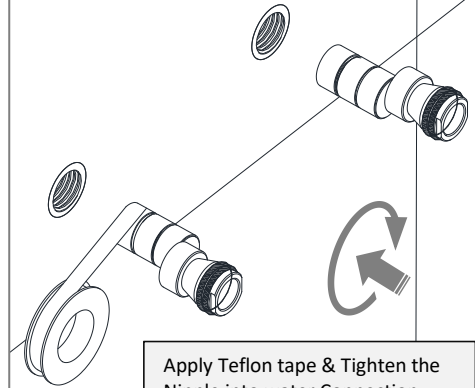


Apply Teflon tape & Tighten the Nipple into water Connection hole.

Check with spirit level.


Note: Check "X" value with technical drawing.

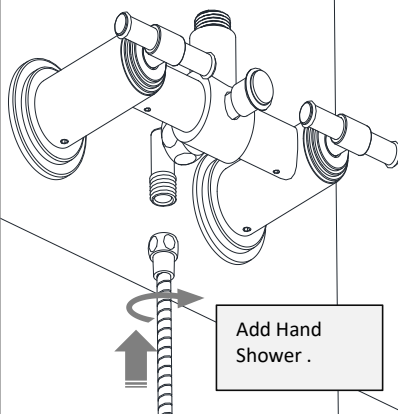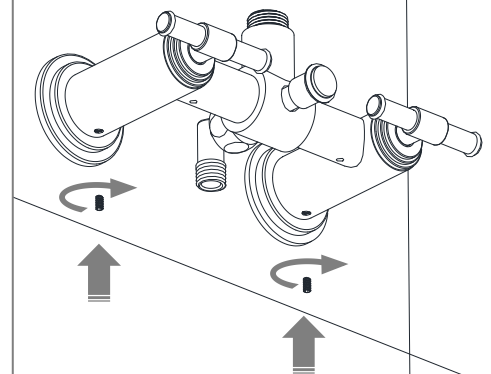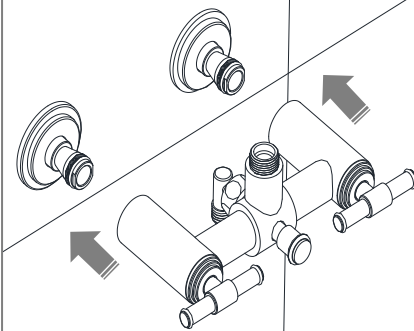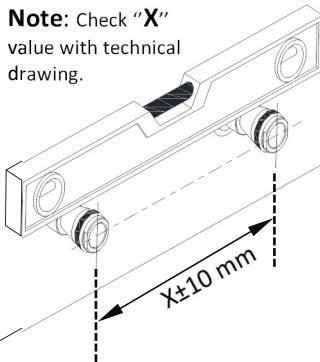



Add Hand Shower .

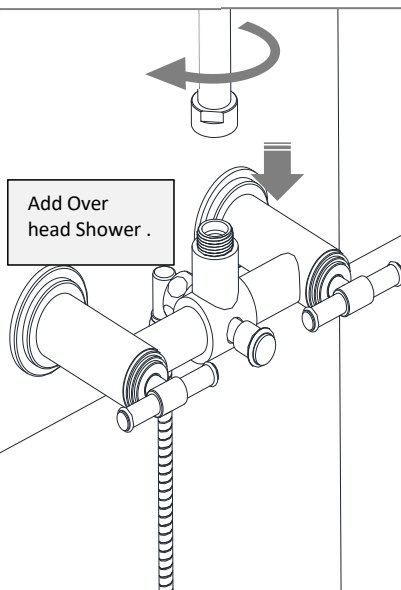

Add Over head Shower .

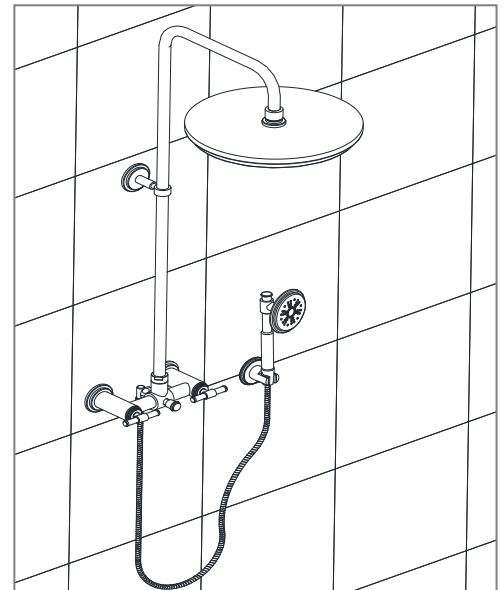

How to operate:

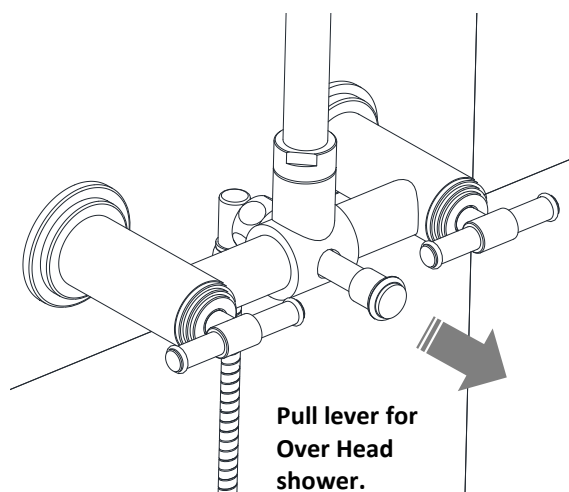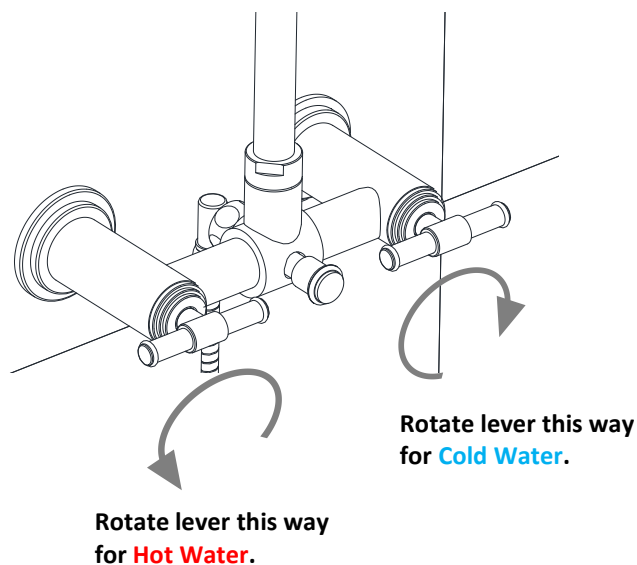

Troubleshooting

(A) Flow related

Problem	: -	Reduced Water Flow.
Cause	: -	Blocked/Clogged cartridges/aerators.
Remedy	: -	Remove the aerators, cartridges clean it thoroughly.

(B) Leakage

Problem	: -	Water Leakage
Cause	: -	Damaged/Broken/Worn out O-rings, brass nuts not tightened
Remedy	: -	Remove & Replace the defective O-rings. Or Tighten the brass nuts firmly

(C) Operation

Problem	: -	Lever Hard To Operate
Cause	: -	Clogged Cartridges (Silt, Dirt, Calcium Deposits etc.)
Remedy	: -	Remove the cartridges clean it thoroughly with water/vinegar.

Safety Tips :-

- ❖ Make sure no loose fitting, Check for Leakage during water fittings.
- ❖ Keep water connection off during connection, keep desire water pressure to get conventional output.
- ❖ Don't use to insert sealing O-rings & sealing washer wherever applicable.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Don't push fittings forcefully, can lead to damage or crack.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**