











INSTALLATION GUIDE

Wall bracket for Hand Shower Range:VIC

Requirements:-

- 1) **Screw Driver**: - for Tightening Screw
- 2) **Wall plug & Allen-key** (Included in Box)
- 3) **Drill machine**: - Drilling Work.
- 4) **Pen/Marker**: - For marking Purpose.
- 5) **Installation**: - Wall Mounted

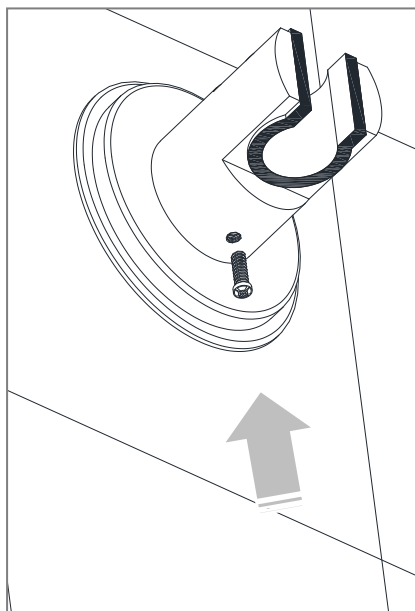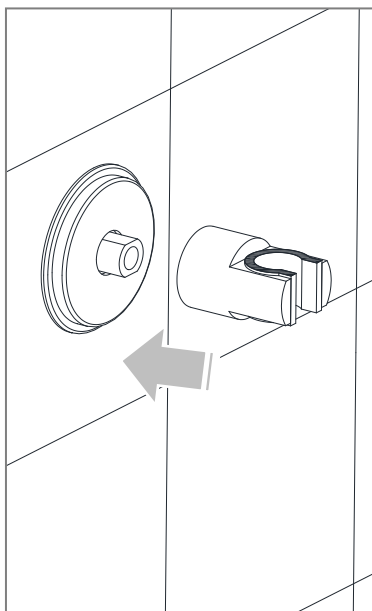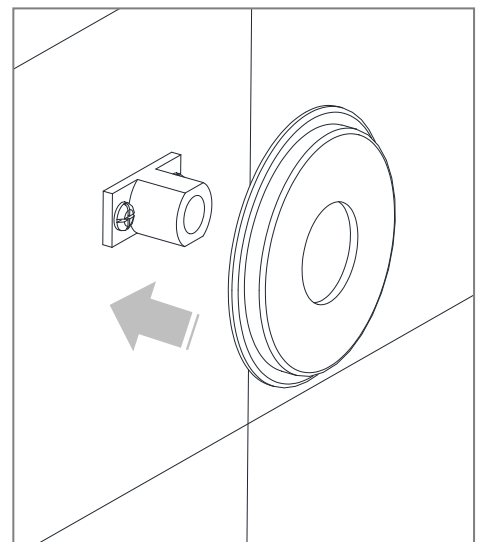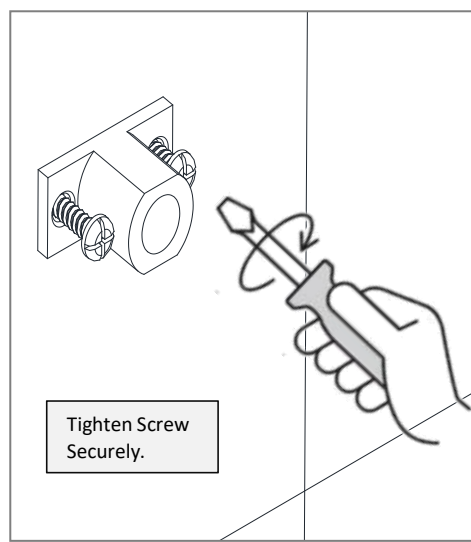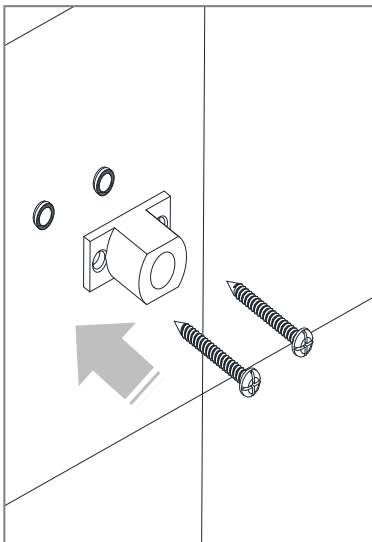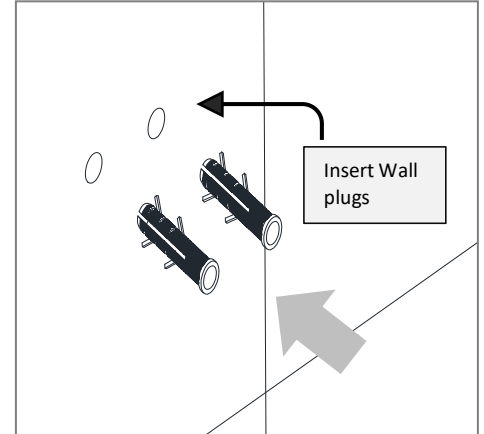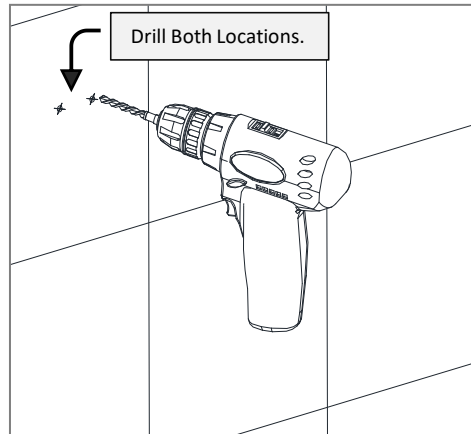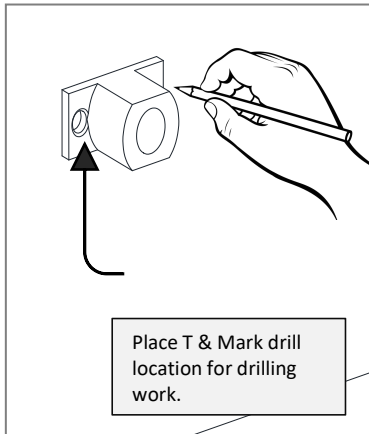

Safety Tips :-

- ❖ Install the Wall bracket at reachable Height.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Don't push or tighten forcefully, can lead to damage or crack.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.



**Recommended Cleaning:-
Twice in a Week.**