





INSTALLATION GUIDE

Requirements:-

- 1) **Pressure** :- 3 bar to 4 bar (Ideal Working Pressure)
- 2) **Pipe Lines** :- 2 lines for hot & cold inlet (19 mm/ 3/4" BSPP)
(Hot & Cold water pressure to be balanced for optimum results.)
- 3) **Installation** :- In wall Concealed

Concealed body of thermostatic shower mixer with 3-way diverter
(Without Exposed Parts)
Range:VIC

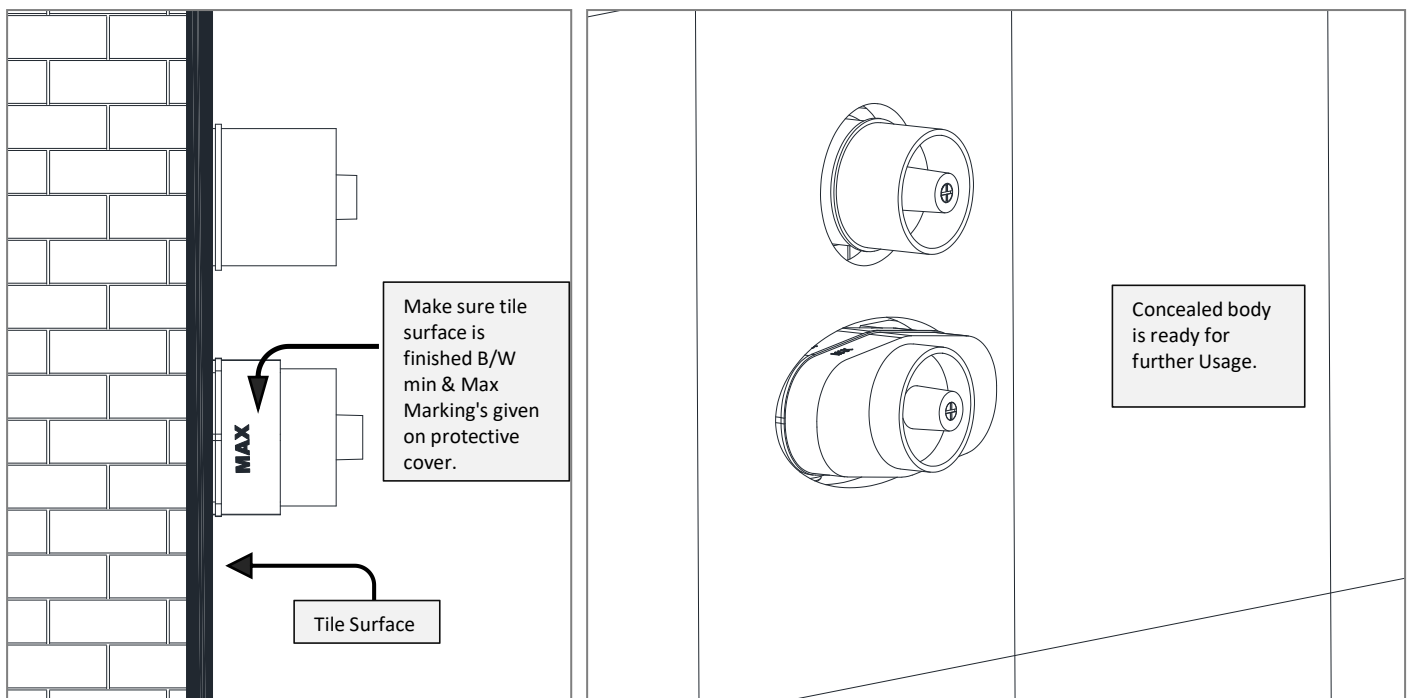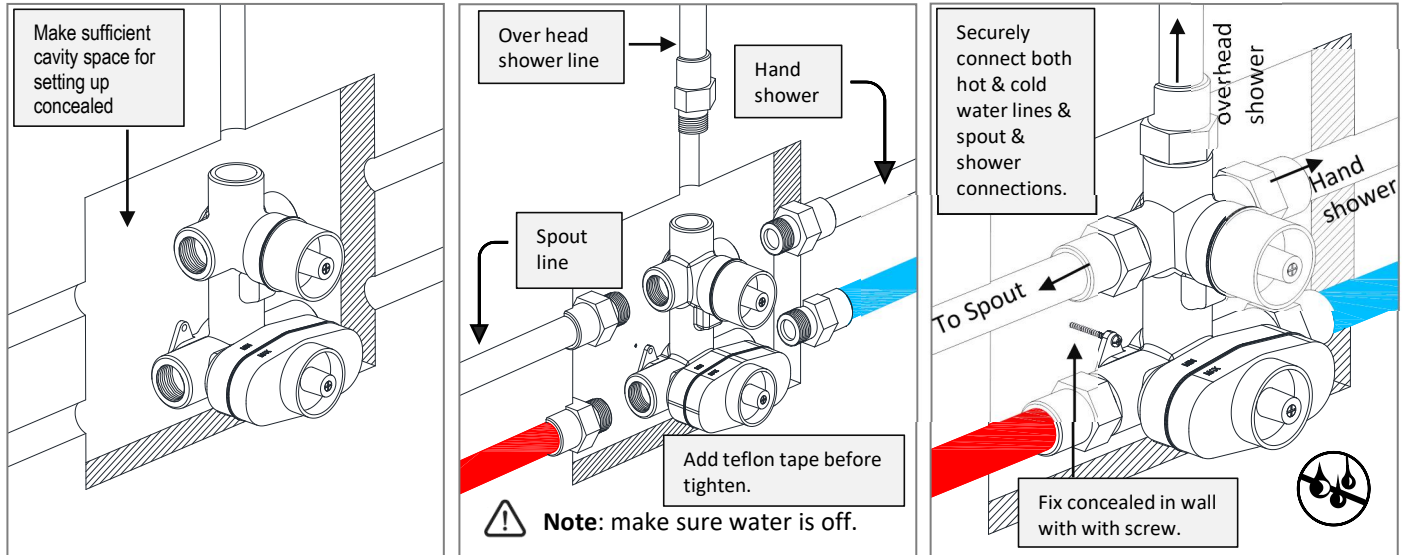

Safety Tips :-

- ❖ Make sure no loose fitting, Check for Leakage during water fittings.
- ❖ Keep water connection off during connection, avoid bending or twisted condition in pipes.
- ❖ Maintain desire water pressure to get conventional output.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Don't push fittings forcefully, can lead to damage or crack.